



1


Open the front cover.

MF746Cx / MF744Cdw / MF742Cdw MF645Cx / MF643Cdw / MF641Cw




2

Pull out the cartridge tray.

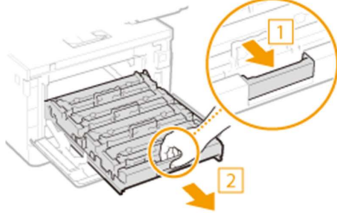

3


Pull the target toner cartridge straight up and out of the machine.

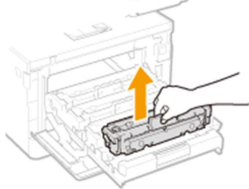

4

Remove the replacement toner cartridge from the packing material.

- 1 Pull the tab of the packing material on a flat place.

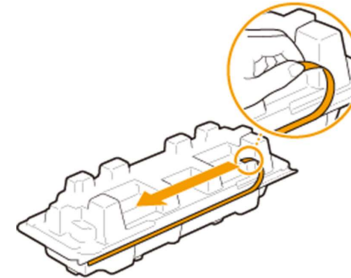


2 Pull out the toner cartridge.




5

Shake the toner cartridge 5 or 6 times as shown below to evenly distribute the toner inside the cartridge.

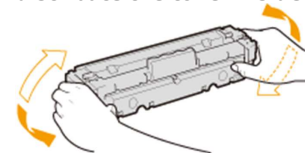

IMPORTANT:

Do not touch the surface of the drum on the bottom of the toner cartridge.

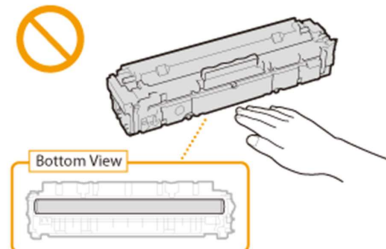


6

Install the toner cartridge.



Each toner cartridge color has its own slot in the toner cartridge tray, and this tray is indicated with a corresponding color label (a). Place the toner cartridge into the slot that corresponds to its color.

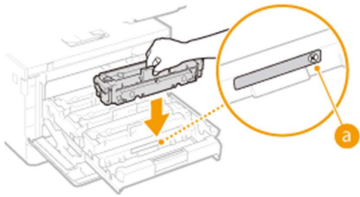

IMPORTANT:

The bottom surface of the toner cartridge is exposed; therefore, be careful not to bump the toner cartridge against the slot frame when inserting it into the slot.

7

Push the toner cartridge tray back in, and close the front cover.

Immediately after the front cover is closed, the quick adjustment (**Quick Adjust**) starts. To perform adjustment for higher quality, perform full adjustment (**Full Adjust**).